

SIEMENS

M35i M35

Observe general precautions for radio transmitters.
Use is prohibited in aircraft, and other areas of interference risk.

Please read your User Guide for complete, safe and effective
operation of your product features and network services.

Siemens provides a worldwide service hotline and internet
support: <http://www.my-siemens.com>



For more comfort and efficiency, use Siemens
Original Accessories, these also enable safe
use whilst driving. Non Original Accessories
can damage your phone.

Issued by
Information and Communication mobile
Haidenauplatz 1
D-81667 Munich

© Siemens AG 2001
All rights reserved. Subject to availability.
Rights of modification reserved.

Siemens Aktiengesellschaft
<http://www.siemens.com/mobiles>

Ref.No.: A31008-H4200-A1-6-7619



Quick Start



* A 5 B 0 0 0 2 5 2 0 4 5 2 9 *

 Information and
Communications

 
SIM Card / Battery

Insert SIM card


Your service provider will supply a SIM card, containing all the key data about your line.

You may need to snap this out carefully from a credit card sized SIM


- Use a coin to unscrew the cover (1)
- Lift off the battery cover (2)

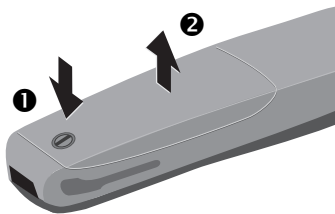

 - Slide out the SIM carrier (3), then turn it in the direction indicated by the arrow (4).

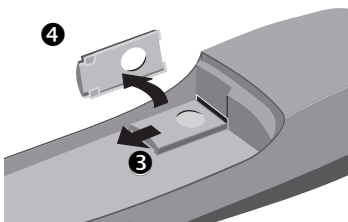

 - Slide the SIM card into the carrier (5). Ensure the angled corner is positioned correctly and that contact is made.
- Turn the SIM carrier until the SIM card faces the phone (6).

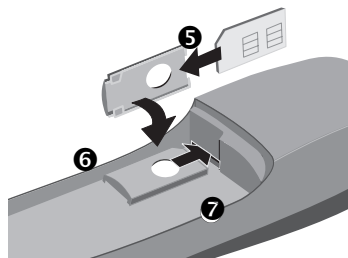


- Slide the SIM carrier into the phone until it clicks into place (7).
- Insert the battery into the phone and close the cover.

Charge battery

The new NiMH battery is not yet fully charged:




- Insert the charger plug into the socket on the phone (with arrow on plug facing upwards).
- Plug charging unit into a mains power socket (ensure voltage range stated on charger is not exceeded).

The unit is fully charged after 2 hours. The charging unit will heat up when used for longer periods. if you experience a reduction in usage time, carry out the battery care function (p.52).

 Display shows charge level.

Usage time

A fully charged battery: 50 - 180 hours standby time **or** 90 - 300 minutes talk time.

Batt. empty:  -  -  full
A beep sounds when the battery is nearly empty.

RÜCKSETZE

WORLDWIDE SET

Overview

Display Indicators

Reception strength/ battery level.

Fast Access Key

Can be assigned an important phone number/ function.

Call Key

- Dial the displayed phone number or name.
- Accept calls.
- Display last calls in standby mode.

Phonebook

Display phonebook entries for easy calling.

Ringer On/Off

Hold down: Switch ringer on and off.

Menu

Set the network and phone functions.

Soft Keys

(see below)

On/Off/End

 
Press briefly: End call or jump back to the previous menu level.

Hold down:

Activate/deactivate phone or return to standby mode.


Key Lock

Hold down: Activate and deactivate the key lock.

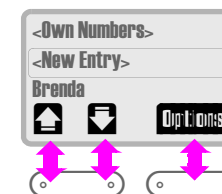

Soft Keys





The current functions are shown on the display as symbols or text above the keys. Different functions are available by pressing either the left or the right end of the keys.


In standby, the soft keys enable fast "name" dialling and menu access or access to a special service, such as  SIM service.

Making Calls


Switch on

Do you still have to insert the SIM or battery? See reverse page for details. Switching PIN control on/off, change the PIN code, p. 54.

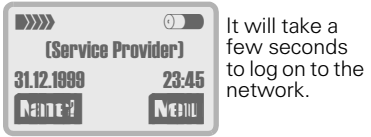


-  Hold down to switch on or off.
-  Enter your PIN code. (correct any errors with ).
-  Confirm (soft key).

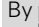


When the name of the service provider appears, the phone is in standby.

If the signal is too weak, move to a window or open space. By pressing the  soft key, you can make an emergency call on all networks even without a SIM card or PIN code.

Making a call

-  Enter the phone number (**always with prefix**).
-  Press. The phone number on the display is dialled.
-  Press. The call is ended.

 Dials any highlighted number in messages.



Redialling

Redialling




The last 10 numbers you called are stored.

In standby:




-  Press.
-  Pressing again dials the last phone number used or scroll to highlight previously used numbers.

Auto redialling




 Press to repeatedly dial a number in progressive intervals for 15 minutes.

Records

The last calls received, made and missed are stored (depending on network).




-  Press, and select **Records** followed by the required list.
-  Scroll in the list and select a phone number.
-  Press for the last caller or choose a different caller from the list.

 
International dialling code

-  Press until “+” appears.
-  Press and select country **or** enter dialling code.
-  Enter the national phone number (the first digit is omitted in many countries).




Phonebook

Making an entry in the Phonebook

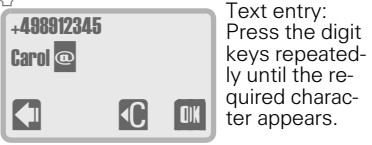


-  Enter the required phone number **with** prefix.
-  Press.
-  Enter a name for the number.



The cursor moves on after a short pause.

-  Press briefly to delete the last character; hold down to delete the last word.
-  Press. The phone number is stored and can be dialled immediately:
-  Press.

Making a call

-  Open phonebook.
-  Select a name with the first letter and/or scroll.
-  Press, the highlighted entry is dialled.





Phonebook menu

Open the phonebook and highlight an entry. The functions available include among others:


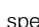
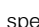
Edit Entry, Delete Entry, Send as Text, Check Space and VIP Entry for important numbers. **Calling Symbols** Add picture to phone number.

Comfort Features

Fast Access keys

- Set the soft key:  Press (the first time, then ) or, e.g.  Press digit key.
- Set speed dialling number (2 - 9):  Press
- ... then select a function from the list:
- Open the **Phonebook** to select a phone number (e.g. “Office”).
- If you select an application (e.g. **Games**), this is assigned directly to the soft key.




 Press.

Making a call (e.g. the “Office” no.): Press  /  or first press a speed dialling number, e.g. .


Making several calls at once

(Depends on the network)

- If the “Call Waiting” feature is available in the network, you can answer a second call, put the first on hold and switch back and forth between the two calls.
- You can make a second call, then return to the first and join all calls together (conference). To do this, during the first call:

-  Press.
-  /  Make the second call.

Press  or  and select **Conference**.

 Press to complete a call or return to the first call

Overview of functions

Menu Control

Main Menu

The main menu is always reached from standby mode by pressing the right soft key.



 Press.

Submenu

You can branch from the main menu into submenus for accessing functions and options:

Press   or .

Go back


-  Press briefly to go back one menu level.
-  Hold down to go back to standby mode.

Features available in the main menu:

Usage Hints


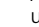
A brief introduction to the various phone functions.

SIM Services (depending on SIM card) Special applications, such as banking or stock market functions, if supported.

Internet  (depending on the network)



This area in the main menu can also be set with one of the other functions listed below.


Office & Fun


- Internet : Access to special sites on the World Wide Web.
- Appointments: Entry of daily or regularly recurring appointments.
- Calculator : Basic calculator functions and memory.



Messages

Text Message

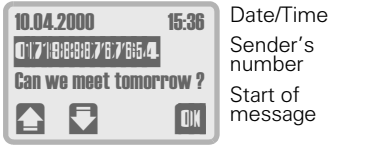-  Indicates a new message on the display.
-  Press to read.



 Scroll through the message.



-  Access message menu with further functions, such as reply, edit, delete, etc. (see p. 38).
-  Press to select highlighted phone number.


Messages should **always** be deleted after they have been read.

Voice Message


The service centre provides you with a mailbox that operates in the same way as an answerphone.


Listening to Voice Message

-  Indicates a new voice mail on the display.
-  Press to play back.

A voice mail can also be indicated by a text message () or a call.




Call and listen to mailbox:


 Press (see “Digit Key”, page 18).


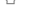
-  Flashes when memory is full. Delete messages as otherwise no more messages can be received.

Writing and Sending Messages

-  Press, select **Messages**, then **Write Message**, then **Create New**.
-  Write your message (T9 editor, see p. 35).

-  Set a blank.
-  UPPER/lowercase.
-  Insert a full stop.

 Press and select **Send Text** from the menu.

 /  Enter the phone number/select the no. from phonebook.



If necessary, enter the phone number of the service centre retain type and validity (see p. 39).

 Press.



Setting Voice Message

If not already pre-set, you will receive a number for calling the mailbox and one for diverting to the mailbox.

1 Calling the mailbox (playback)
 Select **Messages** then **Voice Message**.

 /  Enter the “Call” no. to hear the messages.

2 Call diversion to mailbox
 Select **Divert** then **All Unanswered** then **Set**.

 /  Enter the diversion number to the mailbox.